





Technical information  
Explosion drawing and parts list

EB135 (8500200) EB135 EDGEBANDER | BASE ASS'Y | Version B (From serial number 1064)

Pos.	Serial No.	Code	Description	Quantity
1		1180003	WASHER D.8.4X16X1.6	4
2		3885004	SELF-LOCKING HEX. NUT M.8	4
3		1383003	WASHER AET D.6.4	3
4		1580017	WASHER D.6.2X21X2	19
5		1588017	RETAINING RING D.7	4
6		1619013	WARNING LABEL	1
7		1628081	PLASTIC WHEEL	4
8		8545739	BASE ASS'Y	1
9		8545739	BASE ASS'Y	1
10		1674004	CUP SQUARE NECK BOLT M.8X70	8
11		1675035	HEX. SOCKET HD. CAP SCREW M.6X10	11
12		1675045	HEX. SOCKET HD. CAP SCREW M.6X15	4
13		1680026	WASHER D.4.3X9X0.8	2
14		1685016	SQUARE NUT ASS'Y M.6	12
15		1685017	SELF-LOCKING HEX. NUT M.6	6
16		1688015	RETAINING RING D.12	1
17		1699036	LEVELLING SHOE M.10	4
18		1771024	HEX. HD. SCREW M.6X15	8
19		2033006	WASHER	11
20		2085002	HEX. NUT M.6	11
21		2280004	WASHER D.5.2X11.1X0.7	6
22		2585007	HEX. NUT M.10	4
23		3580010	WASHER D.3.2X7X0.5	12
24		3581004	TOOTHED WASHER D.3.2	12
25		3774011	CUP SQUARE NECK BOLT M.6X15	6
26		3802012	MICROSWITCH LEVER	5
27		3880008	WASHER D.12X20X0.5	2
28		4383008	WASHER AET D.8.4	12
29		5025020	UPPER KNOB	2
30		5174013	SCREW M.5X20	1
31		8519644	LABEL	1
32		6345242	MICROSWITCH REGULATING SUPPORT	1
33		6346040	MICROSWITCH LEVER	1
34		8546658	LOWER BASE EB135	1
35		6478001	SCREW M.4X8 PH.	20
36		6683015	BELLEVILLE WASHER D.10.2X20	2
37		7081003	TOOTHED WASHER D.5.1	1
38		7085008	HEX. NUT M.5	2
39		7575007	HEX. SOCKET HD. CAP SCREW M.6X20	13
40		7575008	HEX. SOCKET HD. CAP SCREW M.6X25	4
41		8519539	LABEL	1
42		8423195	WASHER D.6.3XD.15X1.5	4



Technical information  
Explosion drawing and parts list

EB135 (8500200) EB135 EDGEBANDER | BASE ASS'Y | Version B (From serial number 1064)

Pos.	Serial No.	Code	Description	Quantity
43		8502423	LEVER	1
44		8519197	VOLTAGE LABEL	1
45		8522353	BUSHING	2
46		8523342	MICROSWITCH PROTECTOR	1
47		8523486	INNER PART	1
48		8523068	LOWER PROTECTION	1
49		8526140	SPRING	1
50		8526151	LEVER SPRING	5
51		8545403	DUST COLLECTION CONNECTOR	1
52		8545411	MICROSWITCH ASS'Y	1
53		8546654	MICROSWITCHES SUPPORT	1
54		8546653	MICROSIWTCHES ASS'Y	1
55		8545419	REGULATING SUPPORT	1
56		8523082	PROTECTOR	1
57		8546660	WIRE ASS'Y EB135	1
58		8545449	DUST COLLECTOR REMOTE CONTROL	1
59		8545521	GUIDE ASS'Y	2
60		8545648	DOOR ASS'Y	1
61		8545656	UPPER BASE EB135	1
62		8546199	FEEDER ASS'Y	1
63		8546201	FRONT TRIMMER MICROSWITCH	1
64		8546202	WHEEL SHAFT WITH ROLLER SHAFT ASS 'Y	4
65		8546203	MICROSWITCH WITH LEVER ASS'Y	2
66		8546210	FEEDER ROLLER ASS'Y (V1)	4
67		8568206	CABLES HOLDER	1
68		8568261	SWITCH BOX	1
69		8568275	CLIP	3
70		8569039	MICROSWITCH	5
71		8572032	SCREW M.3X20 PH	10
72		8572037	SCREW M.3X35 PH	2
73		8580040	WASHER D.9.5X17X1.6	8
74		8599132	SQUARE COVER	1
75		8599192	HINGE	1
76		8599193	SPRING HOLDER	1
78		8678008	SCREW M.4X10 PH.	2
79		9085010	HEX. NUT M.3	12
80		9580005	WASHER D.10.2X20X0.26	2
81		9588003	RETAINING RING D.4	6
82		8599265	COVER	4
84		8523044	COVER	1
85		8523064	INNER REINFORCEMENT	1
86		8519555	LABEL	1



Technical information  
Explosion drawing and parts list

EB135 (8500200) EB135 EDGEBANDER | BASE ASS'Y | Version B (From serial number 1064)

Pos.	Serial No.	Code	Description	Quantity
87		8578026	SCREW M.6X16 TORX	4
88		5889049		4
89		9575129	SCREW M.8X50	1
90		8573045	SCREW M.6X15 DIN 7991	2
100		8521630	SHAFT (V2)	4
101		3833085	WASHER D.8X25X3	2
102		2502522	CENTERING DEVICE	1
103		8523614	LOADER CORE	1
104		8522517	CENTERING SHAFT	1
105		8546683	LOADER ROLLER (V2)	4
106		8523613	ROD	1
107		8523169	LOADER SUPPORT (V2)	1
108		8523126	LOADER FENCE	1
109		8546682	LOADER ASSY	1