





Technical information
Explosion drawing and parts list

EB25 (6300099) EB25 EDGEBANDER 220V (USA) | BASE ASS'Y | Version A

Pos.	Serial No.	Code	Description	Quantity
1		1675045	HEX. SOCKET HD. CAP SCREW M.6X15	13
2		2085002	HEX. NUT M.6	21
3		7575007	HEX. SOCKET HD. CAP SCREW M.6X20	8
4		3588029	ROLL PIN D.5X16	4
5		6303099	FIXED GUIDE (SHORT)	6
6		6303098	FIXED GUIDE (LONG)	2
7		9574001	CUP SQUARE NECK BOLT M.5X15	53
8		3802012	MICROSWITCH LEVER	3
9		3869001	MICROSWITCH	3
10		4426012	SPRING	3
11		4450142	MICROSWITCH HOLDER	1
13		9588003	RETAINING RING D.4	3
14		3870033	PAN HD. TAPPING SCREW 4X5/8 PH.B.	2
15		3774011	CUP SQUARE NECK BOLT M.6X15	4
16		4485020	HEX. NUT M.2.6	2
17		4472022	SCREW M.2.6X20	1
18		4469021	MICROSWITCH	1
19		6346040	MICROSWITCH LEVER	1
20		3880008	WASHER D.12X20X0.5	2
21		1688015	RETAINING RING D.12	1
22		6345453	KIT REGULATING MICROSWITH SUPPORT	1
23		1580017	WASHER D.6.2X21X2	28
24		1685017	SELF-LOCKING HEX. NUT M.6	4
25		1689023	RIVET D.3X6	8
26		6319091	LABEL	1
27		6346039	TIE ROD	2
28		8545647		1
29		4468072	SOCKET 230V	1
30		4403012	PANEL PROTECTOR	1
31		3525018	KNOB	2
32		1025101	KNOB M6X17 mm (CP)	1
33		1650029	UPPER LOADER COVER	1
34		1650024	LOWER TAPE ROLL LOADER	1
35		1612003	SELF LUBRICATED BEARING B-15X20X25/25X3	1
36		1685016	SQUARE NUT ASS'Y M.6	7
37		8568206	CABLES HOLDER	1
38		1650069	LOADER HOLDER ASS'Y	1
39		1675037	HEX. SOCKET HD. CAP SCREW M.6X12	11
40		2280004	WASHER D.5.2X11.1X0.7	53
41		1771024	HEX. HD. SCREW M.6X15	8
42		6346038	GUIDE	1
43		1619013	WARNING LABEL	1



Technical information
Explosion drawing and parts list

EB25 (6300099) EB25 EDGEBANDER 220V (USA) | BASE ASS'Y | Version A

Pos.	Serial No.	Code	Description	Quantity
44		6346045	LOWER FORNITURE ASS'Y	1
45		1185003	HEX. NUT M.8	4
46		8545739	BASE ASS'Y	1
46		8599265	COVER	2
47		1674004	CUP SQUARE NECK BOLT M.8X70	4
48		4383008	WASHER AET D.8.4	8
49		1699036	LEVELLING SHOE M.10	4
50		6346063	MAIN SWITCH ASS'Y	1
51		1170028	PAN HD. TAPPING SCREW 8X3/4 PH.BZ.	2
52		6368032	PLUG	1
53		6346056	LEFT EXTENSION ASS'Y	1
54		6303078	PANEL PROTECTOR	1
55		7089007	WING NUT M-6	4
56		6303097	TABLE HOLDER GUIDE	3
57		1675035	HEX. SOCKET HD. CAP SCREW M.6X10	18
58		1628091	PANEL HOLDER ARM	2
59		6346054	TABLE ASS'Y	1
60		3821046	ARM NUT	2
61		6333059	HOLDER	1
62		7085008	HEX. NUT M.5	53
63		8545739	BASE ASS'Y	1
63		8599265	COVER	2
64		6346055	RIGHT EXTENSION ASS'Y	1
65		9075003	HEX. SOCKET HD. CAP SCREW M.8X35	2
66		3833085	WASHER D.8X25X3	2
67		3774011	CUP SQUARE NECK BOLT M.6X15	4
68		6673010	FLAT HD. SCREW M.5X8 PH.	4
69		1623040	PRESSER HOLDER	2
70		1623043	PRESSER SPRING	2
71		1623041	PRESSER CLAMP	2
72		1650033	PRESSER ASS'Y	2
74		1683004	DISC SPRING D.6.2X12.5	2
75		4380012	WASHER D.6.4X12X1.6	9
76		2385005	HEX. NUT M.4	2
77		2033006	WASHER	6
78		7575008	HEX. SOCKET HD. CAP SCREW M.6X25	3
79		8572032	SCREW M.3X20 PH	6
80		8522353	BUSHING	2
81		6683015	BELLEVILLE WASHER D.10.2X20	2
82		3580010	WASHER D.3.2X7X0.5	6
83		9085010	HEX. NUT M.3	6
84		1383003	WASHER AET D.6.4	3



Technical information
Explosion drawing and parts list

EB25 (6300099) EB25 EDGEBANDER 220V (USA) | BASE ASS'Y | Version A

Pos.	Serial No.	Code	Description	Quantity
85		8526151	LEVER SPRING	2
86		9580005	WASHER D.10.2X20X0.26	2
88		8599212	COVER	2
89		8519333	LABEL	4